


How to: INSTALL FENCE POSTS using METT PRODUCTS

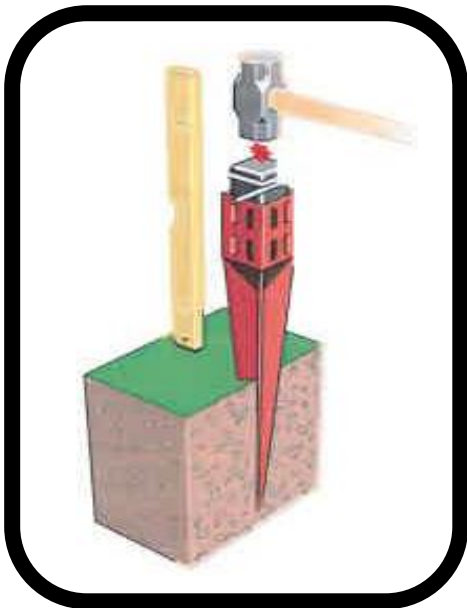

Steel Spike Supports

Using the Mett Driving Tool and a sledgehammer or something equivalent, then drive the Steel Spike by striking the Driving Tool, forcing the spike down in to the ground. Continue doing this until the full spike is buried in to the ground.

Tip: Regularly check the vertical alignment using a spirit level.

Now that the Steel Spike is set in to place slot your fence post in to your Steel Spike Support and then tighten the two bolts on the side of the Spike to secure your fence post in to place.

Bolt Down Anchors

Start by attaching your Bolt Down Anchor on to your concrete area. We recommend our M8 thunderbolts with a minimum length of 60mm, these can be found on our eDecks website.

Simply drill an 8mm hole using an SDS Drill Bit ensuring the hole depth is 10mm longer than the bolt length to allow for dust. Remove any loose dust and fix the bolt in to place through the holes provided on the anchor.

Now that the Bolt Down Anchor is set in to place slot your fence post in to your Bolt Down and then tighten the two bolts on the side of the Anchor to secure your fence post in to place.

