


Rustic Rose Enclosed Pergola

Fitting Instructions

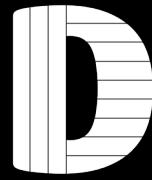

Component List

Pergola Parts


- | | |
|--|-----|
| 4 x Round Pointed Timber Corner Poles 2400mm | (A) |
| 9 x Round Timber Rafter Poles 2250mm | (B) |
| 8 x Round Timber Supports (Angled) 470mm | (C) |

Fixings

- | | |
|--------------------|-----|
| 18 x 4" Wood Screw | (X) |
| 52 x 3" Wood Screw | (Y) |

Trellis Panels

- | | |
|-----------------------|-----|
| 3 x 6ft Trellis Panel | (Z) |
|-----------------------|-----|

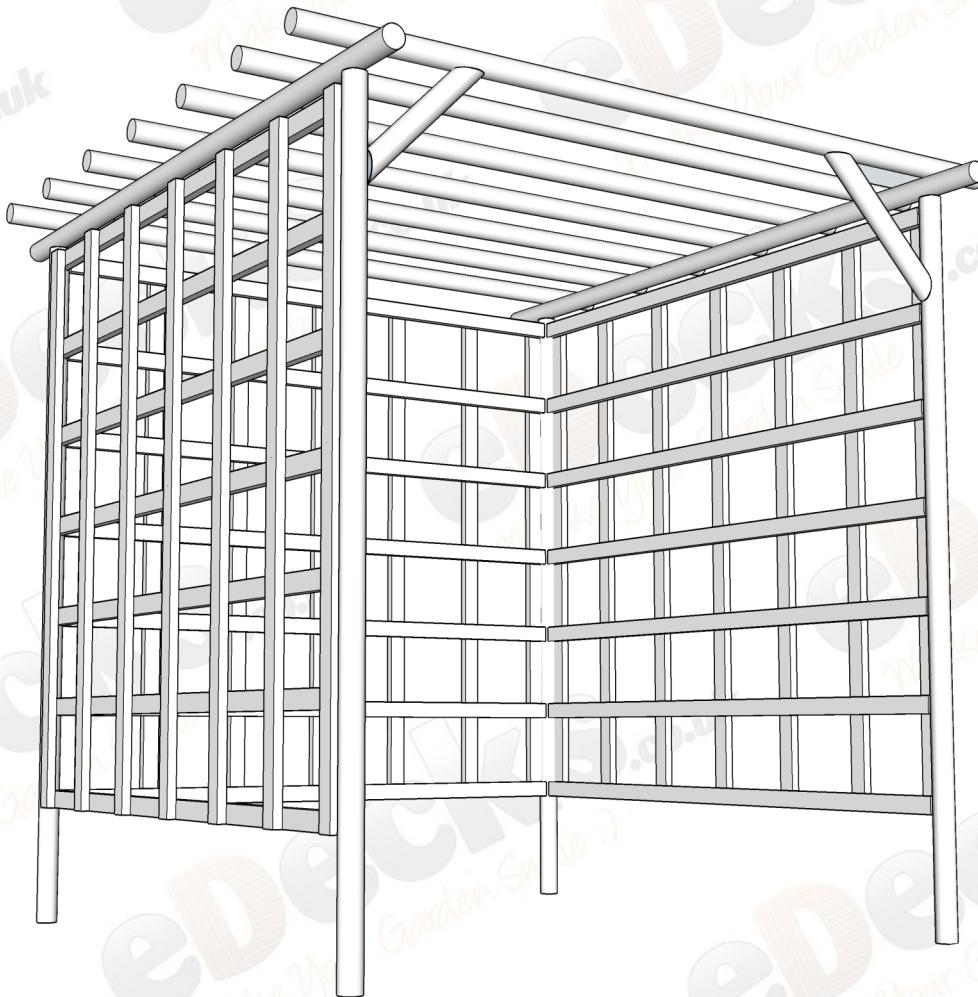

Tools Required:


- Drill driver
- Pencil
- Tape measure
- Spirit level
- Step Ladders

We recommend a minimum of 2 people to assemble this pergola.

All images are for illustration only. Please see individual item listings for actual item specifications.

Rustic Rose Enclosed Pergola


Fitting Instructions

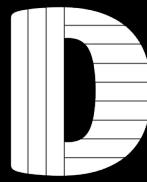


Step 1

Start by laying out 2 x corner poles (A), 1 x rafter pole (B) and 2 x support pieces (C).

The distance between corner poles (inside edge to inside edge) needs to be 1828mm (6ft).

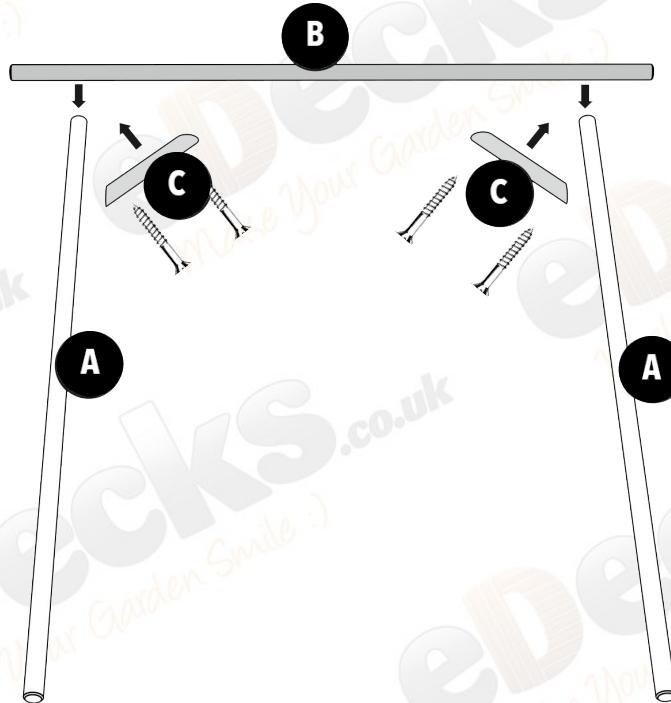

Step 2

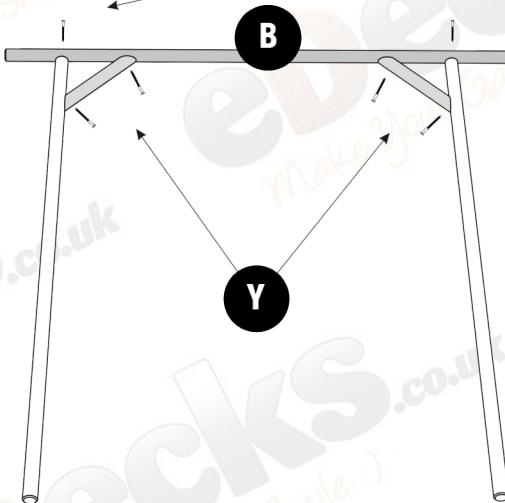

Position the rafter pole (B), centrally on top of the support poles (A).


Make sure the distance between corner poles (inside edge to inside edge) is 1828mm (6ft).

Drive through the rafter pole in to the top of the corner poles using 1 x 4" Wood screw (X).

Secure the support pieces (C) into the corners using 2 x 3" Wood Screws (Y) at each side.

Rustic Rose Enclosed Pergola


Fitting Instructions

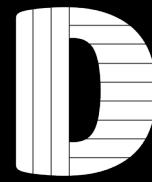

Step 3

Repeat steps 1 & 2 to create an identical second side to the pergola.

You should now have two sections exactly the same.

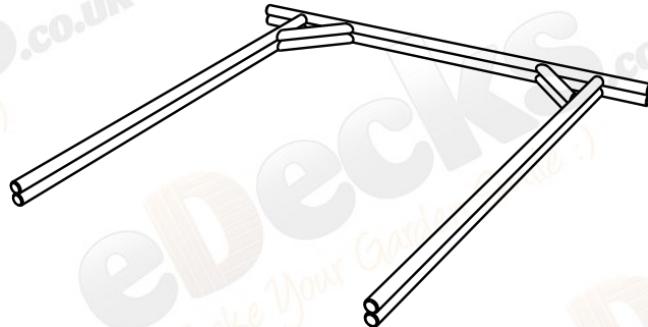


Step 4

Mark out where you will be setting the gazebo and prepare your holes ready to drop the sides in. Dig down to a depth of 300mm plus an allowance around the post for concrete/postmix (not included).

There should be a 1828mm (6ft) gap between each corner post (**A**).

Drop the corner posts (**A**) of the first side 300mm deep in to the ground. Do not fix in place at this stage.

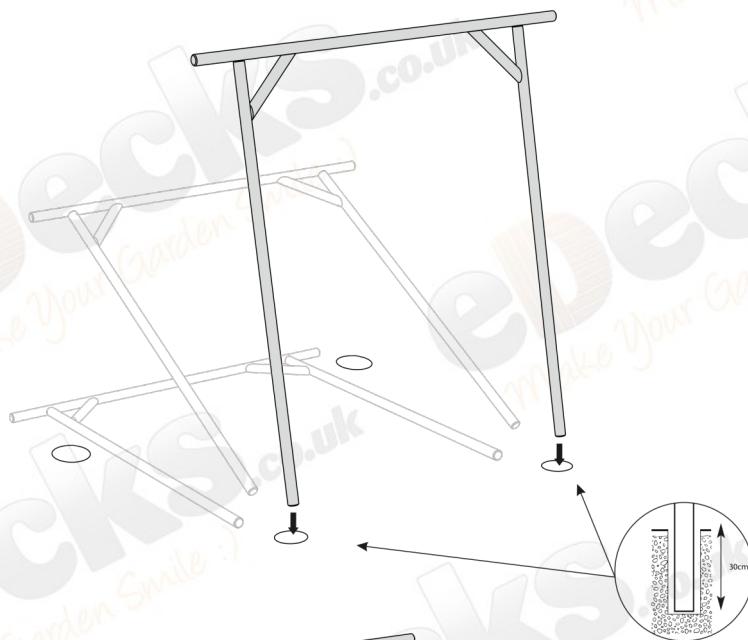

Repeat with the second side and you will now have all corner posts stood upright.

Have one person holding up one side while the other person begins to fix the rafters in the next step.



All images are for illustration only. Please see individual item listings for actual item specifications.

Rustic Rose Enclosed Pergola



Fitting Instructions




Step 5

Whilst making sure your corner supports are level, position 2 x rafter poles (B) across the top of the previously installed rafter poles, in line with the corner posts (A). Position these with equal overhang at either end.

Drive through the rafter poles (B) into the rafter pole below using 1 x 4" Wood screw (X).

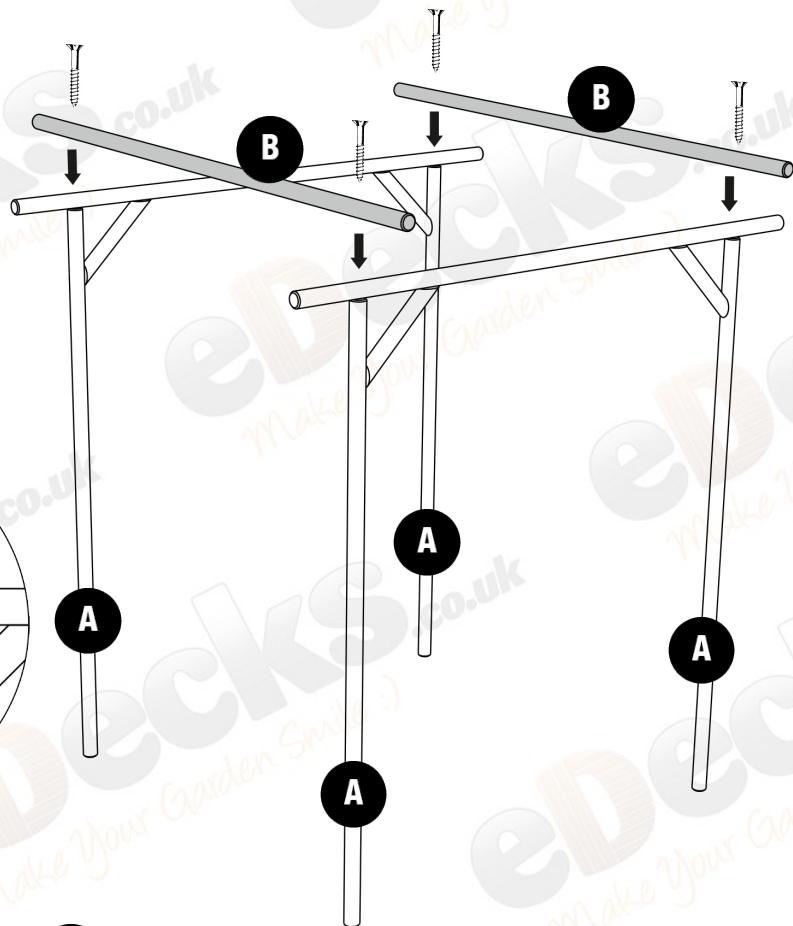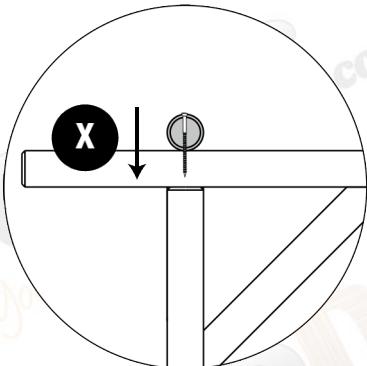

Step 6

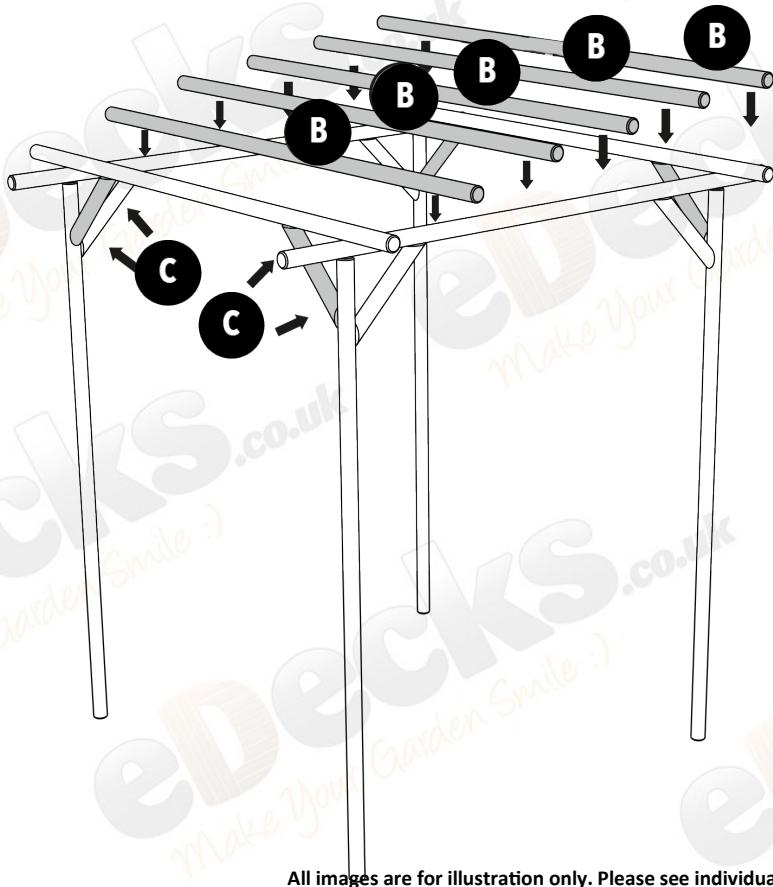

Fix the remaining 5 x rafter poles (B) by equally spacing in-between the two rafter poles fitted in step 5.

Use 1 x 4" Wood screw (X) per side.

After securing all the rafters, take the remaining angled supports (C) and fix in place at the front and rear of the pergola using 2 x 3" Wood screws (Y) for each angled support piece (C).

All images are for illustration only. Please see individual item listings for actual item specifications.

Rustic Rose Enclosed Pergola

Fitting Instructions




Step 7

Secure your corner posts into their holes that you prepared in step 4. Carefully position each corner post and fix in place with your chosen concrete/postmix (not included).

Step 8

Position the two side trellis (**Z**) in to place and fix through each side into the pergola corner posts (**A**) using 6 x 3" wood screw (**Y**) on each side of the trellis panels.


We recommend to position the 6ft trellis to the top of the sides as per the diagrams, but feel free to position as you see fit.

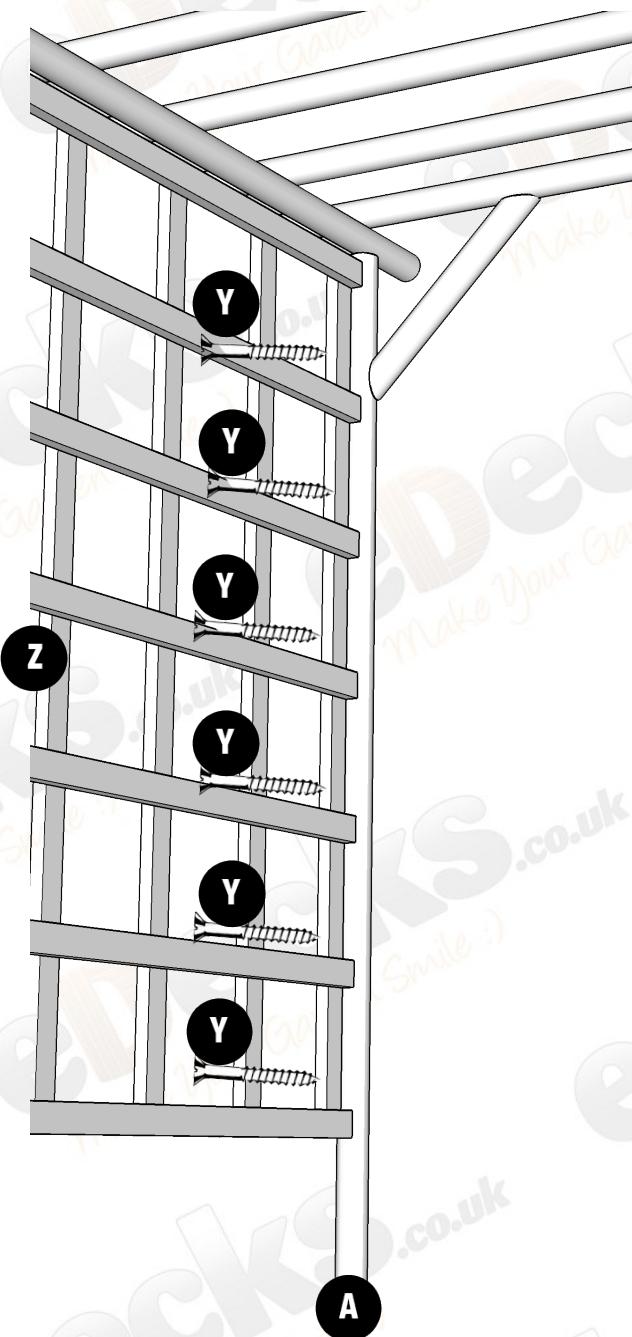

All images are for illustration only. Please see individual item listings for actual item specifications.

Rustic Rose Enclosed Pergola


Fitting Instructions

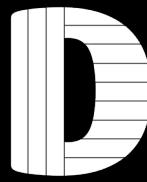

Step 9


REMOVE the two support braces (**C**) that were fitted in Step 2/3, from the side that you will be fitting your 3rd trellis panel (**Z**) to, as this will make room for the trellis. These 2 pieces of support brace (**C**) are now redundant.

The trellis also acts as a support once its in position.

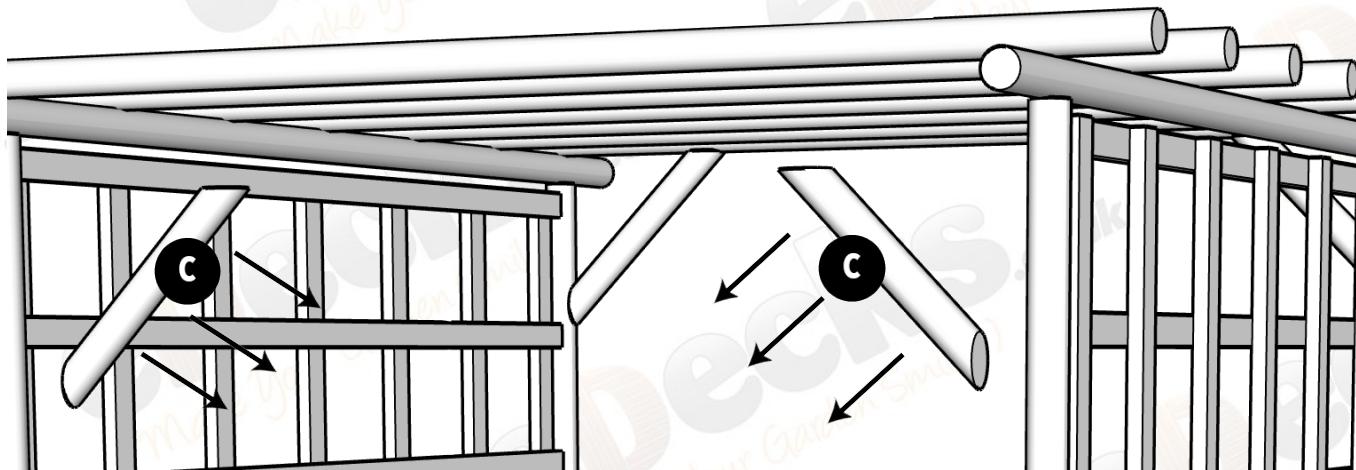

Step 10


You now need to secure the 3rd trellis panel (**Z**) in place, just as you did for the other two sides in step 8, using 12x 6 x 3" Wood Screw (**Y**).

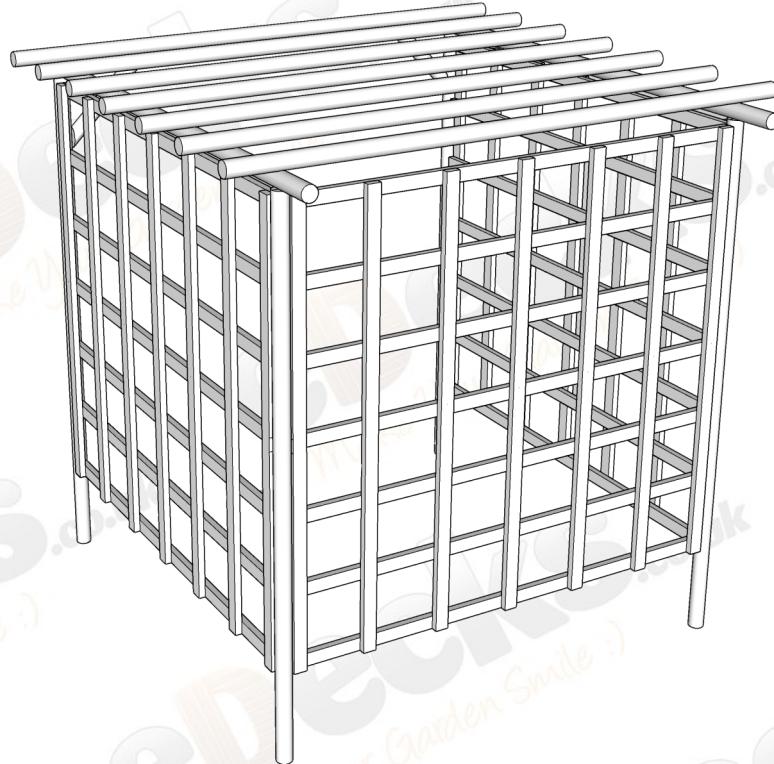

All images are for illustration only. Please see individual item listings for actual item specifications.

Rustic Rose Enclosed Pergola

Fitting Instructions

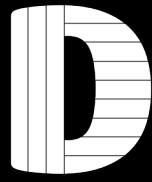

Finished

Your Rustic Rose Enclosed Pergola is now complete.



Enjoy your new Rustic Rose Enclosed Pergola!

All images are for illustration only. Please see individual item listings for actual item specifications.

Page 7 of 7